

DSPbR-EDGE-UPDATE

SERVICE BULLETIN DSPbR EDGE - UPDATING FIRMWARE

Product: DSPbR EDGE Rebroadcast Repeater

Subject: Firmware Upgrading

Date: 15th October 2020

Description

This Service Bulletin describes the steps required to upgrade the firmware in the DSP-based Repeater EDGE (DSPbR EDGE).

Upgrading Firmware

Please read all Service Bulletins published from the release of the firmware currently operating in your DSPbR EDGE prior to commencing an upgrade. The upgrade to a firmware version may require an additional (interim) step in the upgrade process before an upgrade to a later firmware version is attempted.

DSPbR EDGE Firmware/GUI Upload

To use the upload and other procedures described in this document, you need to use a PC connected to the EDGE via either a Network or locally via an Ethernet cable. You will need to know the IP address of the EDGE and you must be able to communicate with the EDGE using a PC running Internet Explorer version 11 or higher. You will also need the password required for admin login.

Note: It is important to confirm the compatibility of the hardware (i.e. modules) and firmware revisions currently fitted into an existing DSPbR EDGE in the field – PRIOR to attempting an upgrade to any later firmware revision.


In isolated cases, particularly where firmware has been developed and supplied for customised applications, later revisions of the product’s generic firmware may be incompatible, and attempting to upgrade such customised units to later firmware revisions may result in performance issues – such as the loss of the original customised features. Please contact RFI prior to upgrading any DSPbR EDGE to confirm any compatibility issues with any later firmware revision releases.

Before You Start

It is recommended that you save the DSPbR EDGE configuration to the internal file system before you perform any firmware upgrades. Furthermore, it is also recommended to backup all internally saved configuration files to your PC. The procedures to perform these backups are provided below.

Save Configuration Files


1. Login into EDGE as Admin.
2. Navigate to Maintenance -> Files -> **Configuration Files**
3. Enter the file name and “Save configuration”:

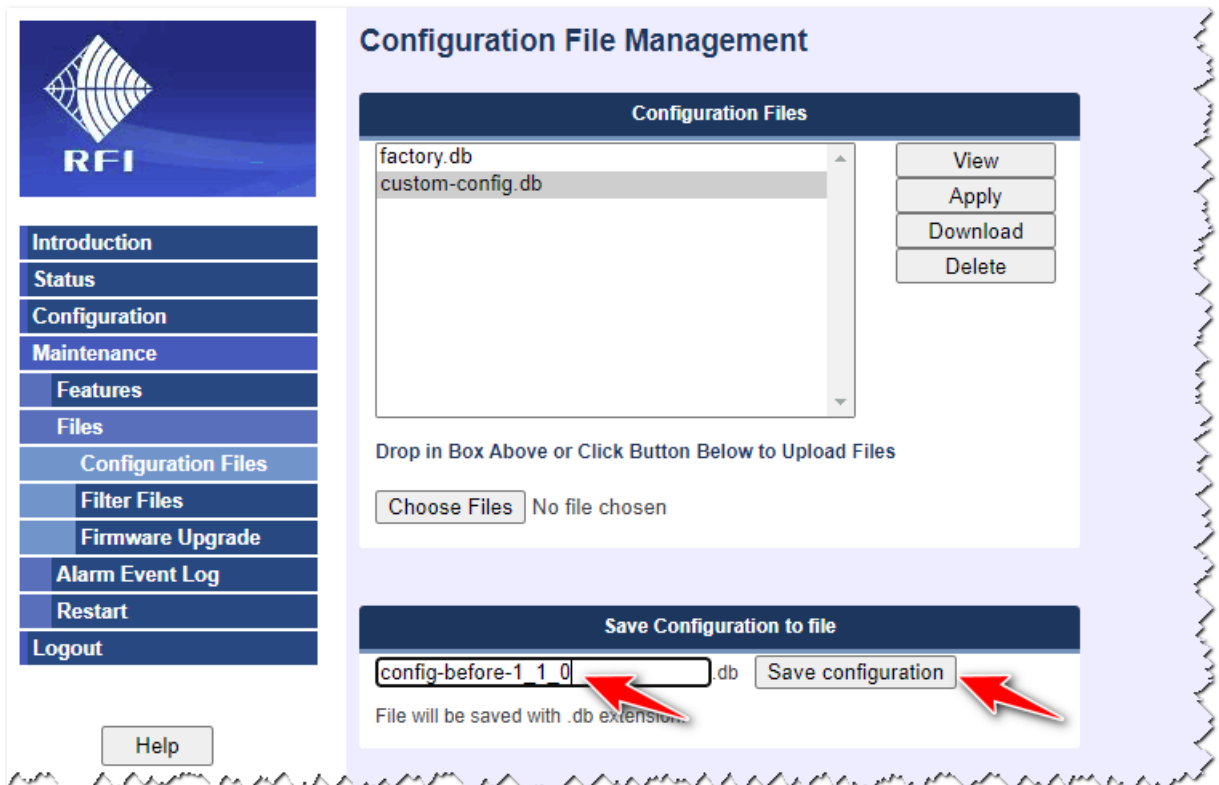


The screenshot displays the 'Configuration File Management' interface. On the left is a navigation menu with options: Introduction, Status, Configuration, Maintenance, Features, Files, Configuration Files, Filter Files, Firmware Upgrade, Alarm Event Log, Restart, Logout, and a Help button. The main content area is titled 'Configuration File Management' and contains a 'Configuration Files' section with a list of files: 'factory.db' and 'custom-config.db'. To the right of this list are buttons for 'View', 'Apply', 'Download', and 'Delete'. Below the list is a section for uploading files, with a 'Choose Files' button and the text 'No file chosen'. At the bottom, there is a 'Save Configuration to file' section with a text input field containing 'config-before-1_1_0', a '.db' extension, and a 'Save configuration' button. Red arrows point to the text input field and the 'Save configuration' button. Below the input field, it says 'File will be saved with .db extension'.



4. New configuration file should appear in the list of configuration files:

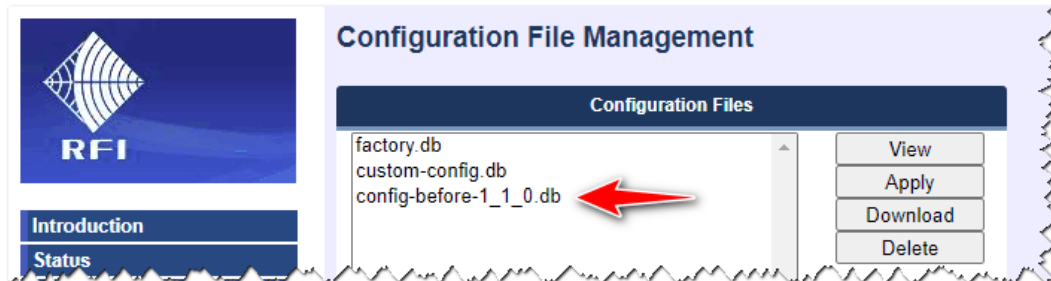


5. To backup a configuration file to your PC, select the required configuration file from the file list and click the "Download" button:

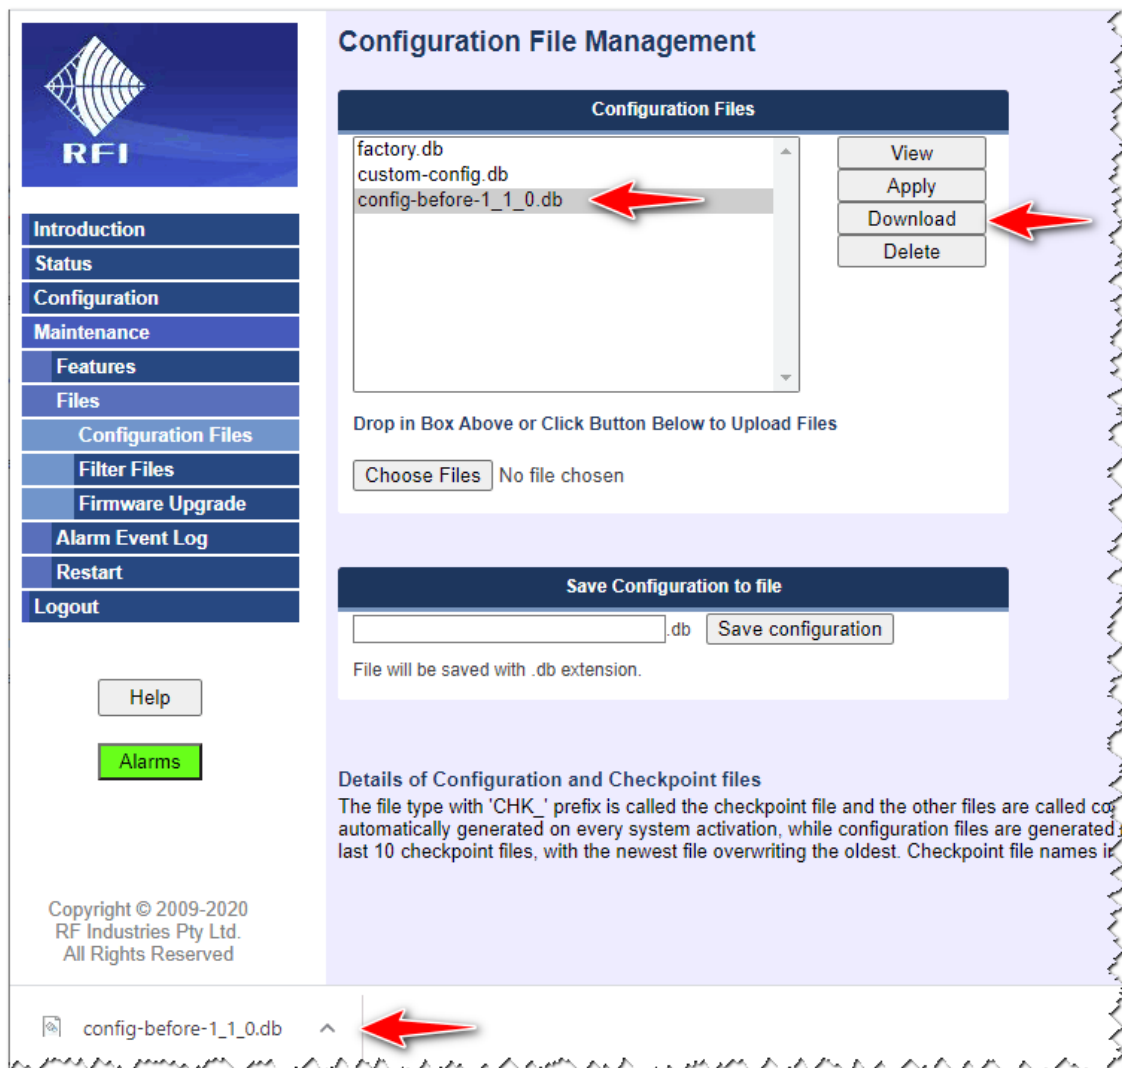

6. Repeat steps 5 above for any other existing internal configuration files that you wish to preserve.

Firmware Version Check Procedure


1. Login into EDGE as Admin.
2. Navigate to Status -> **Version Register**
3. Overall EDGE package version, as well as the SCM and DRFM version will be listed as per example below (i.e. **EDGE v1.0.1**, SCM v1.1.1, DRFM A & B v4.6.3):

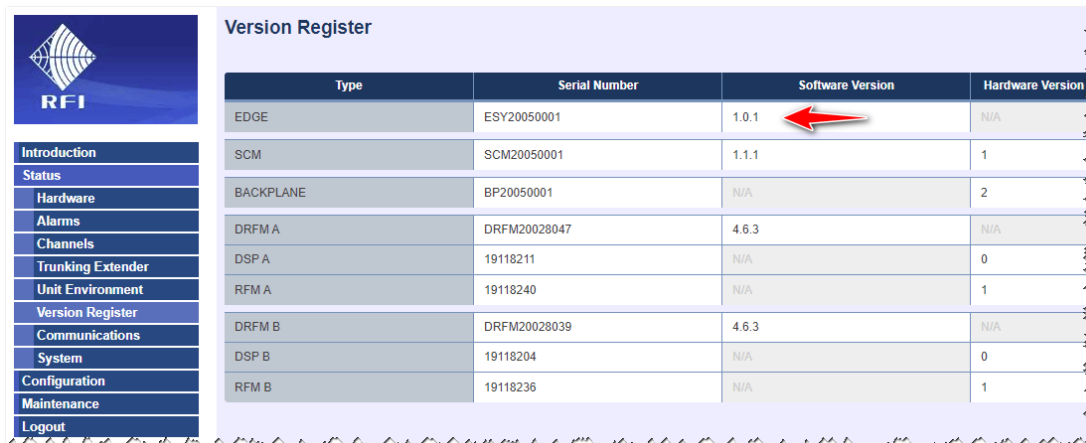

Type	Serial Number	Software Version	Hardware Version
EDGE	ESY20050001	1.0.1	N/A
SCM	SCM20050001	1.1.1	1
BACKPLANE	BP20050001	N/A	2
DRFM A	DRFM20028047	4.6.3	N/A
DSP A	19118211	N/A	0
RFM A	19118240	N/A	1
DRFM B	DRFM20028039	4.6.3	N/A
DSP B	19118204	N/A	0
RFM B	19118236	N/A	1

New Firmware Upload Procedure

1. Login into EDGE as Admin.
2. Navigate to Maintenance -> Files -> **Firmware Upgrade**
3. Select the EDGE upgrade file to upload:

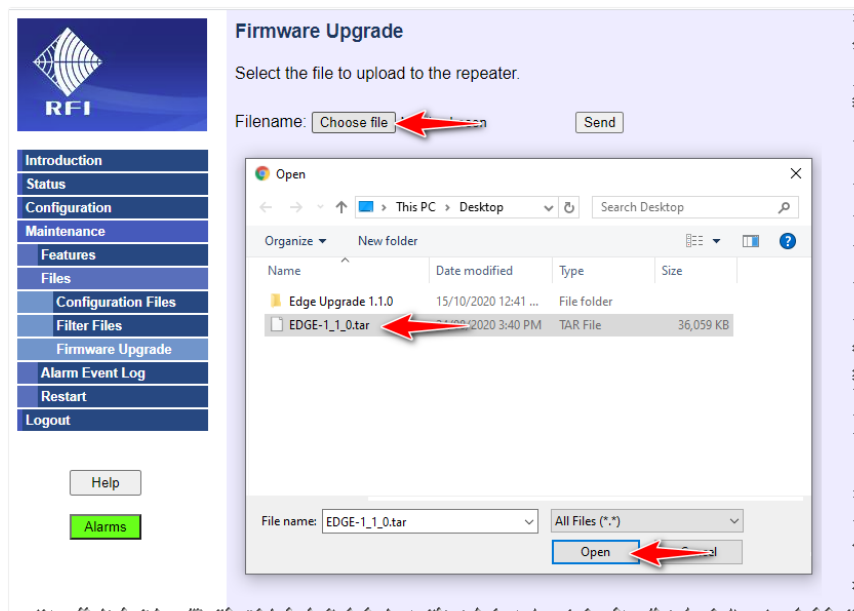

Firmware Upgrade

Select the file to upload to the repeater.


Filename:

Open

File name:




- Click on "Send" to start the upgrade process:

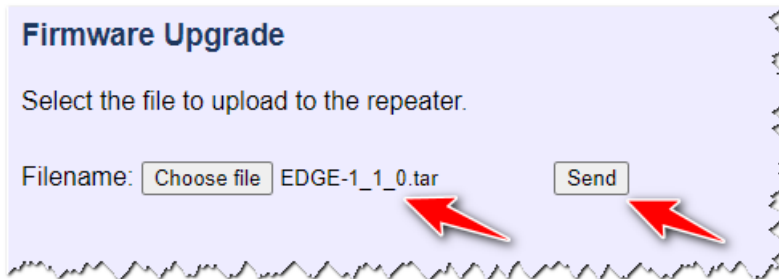

- After pressing "Send" **do not navigate away from the Firmware Upgrade page until the upgrade is successfully completed and the EDGE unit restarted.**

The upgrade process will take about nine minutes:

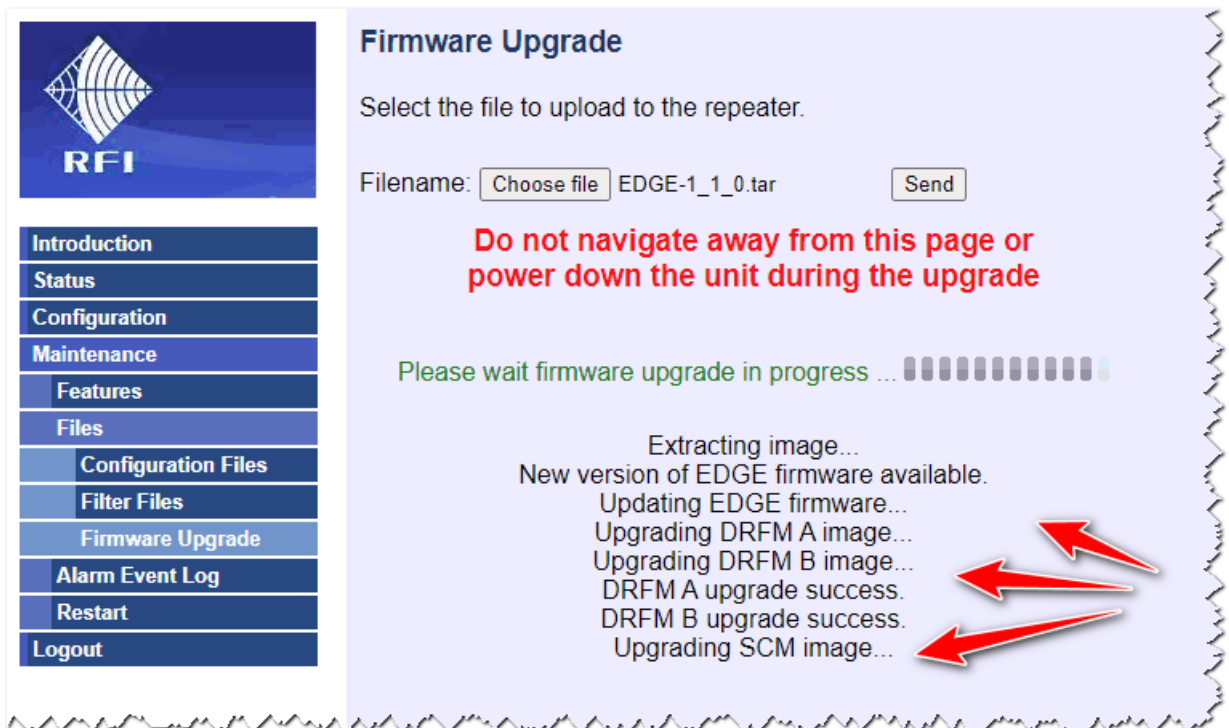

- Upon successful completion of the upgrade you will see the following screen while the EDGE unit is rebooting.

Allow one minute for the reboot to complete:



Firmware Upgrade

Select the file to upload to the repeater.

Filename: EDGE-1_1_0.tar

Extracting image...
New version of EDGE firmware available.
Updating EDGE firmware...
Upgrading DRFM A image...
Upgrading DRFM B image...
DRFM A upgrade success.
DRFM B upgrade success.
Upgrading SCM image...
SCM upgrade success.
Restarting EDGE now - please wait a minute

7. To verify the new version numbers, please follow the "Firmware Version Check Procedure" described above.

EDGE package version should have changed to v1.1.0. SCM version should now indicate v1.1.2 and the versions of DRFM A & B should be v4.6.3:

Type	Serial Number	Software Version
EDGE	ESY20050001	1.1.0
SCM	SCM20050001	1.1.2
BACKPLANE	BP20050001	N/A
DRFM A	DRFM20028047	4.6.3
DSP A	19118211	N/A
RFM A	19118240	N/A
DRFM B	DRFM20028039	4.6.3
DSP B	19118204	N/A
RFM B	19118236	N/A

- END -